

How-to for TFR4SB/ TFR8SB Firmware Upgrade

Tools need:

FUC-3
FUL
Jumper

PC Program need:

FrSky firmware upgrade adapter
FrSky USB driver


Step 1:

Set TFR4SB/ TFR8SB into Boot Loader Programming Mode:



- TFR4SB
Short Circuit CH1 & CH2 Signal Pins



- TFR8SB
Short Circuit CH7 & CH8 Signal Pins

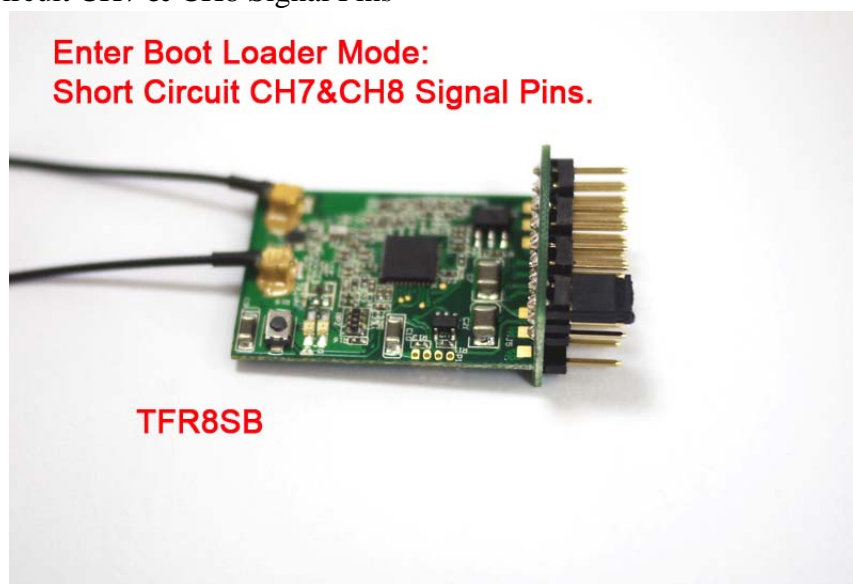



Step 2: Connection - Take example by TFR8SB

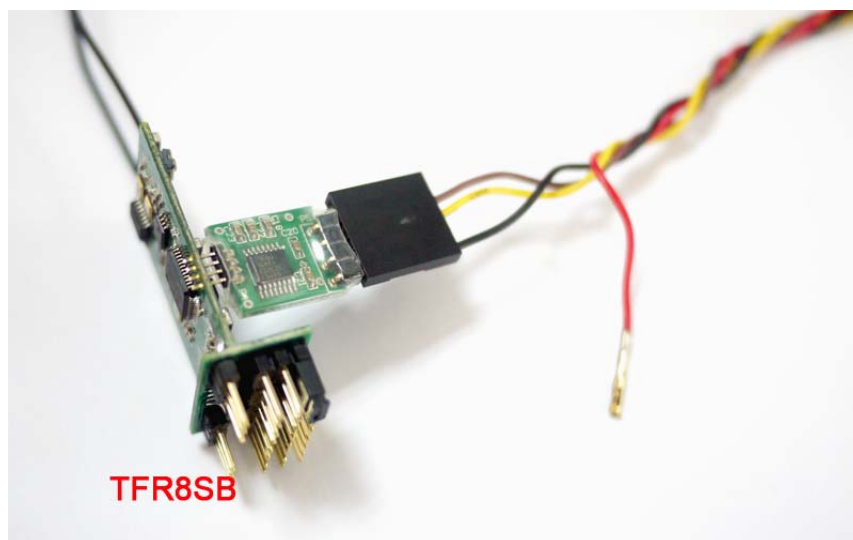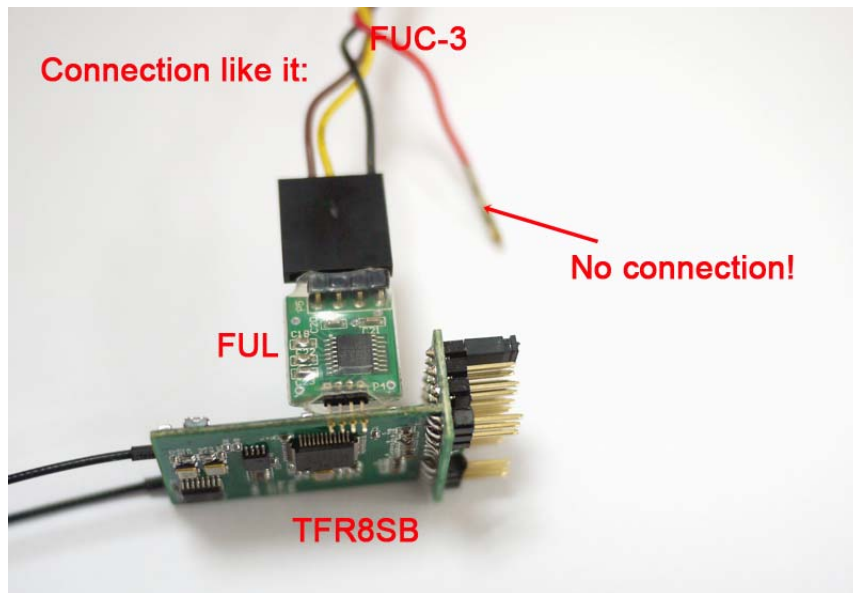

Steps 3:
Connect FUC-3 to computer


Step 4:

Run FrSky Firmware upgrade adapter. Match the COM port number to the one assigned by Windows, and Click file to choose the firmware you need upgrade.

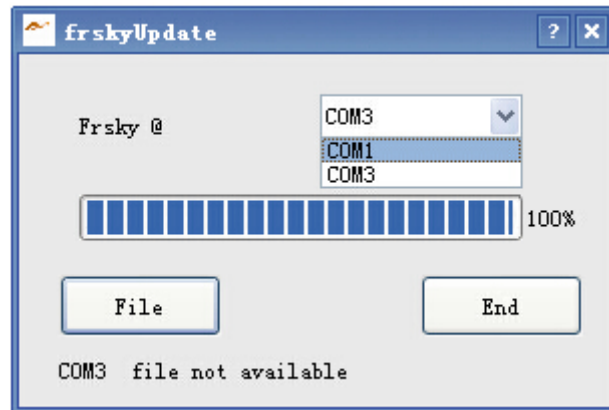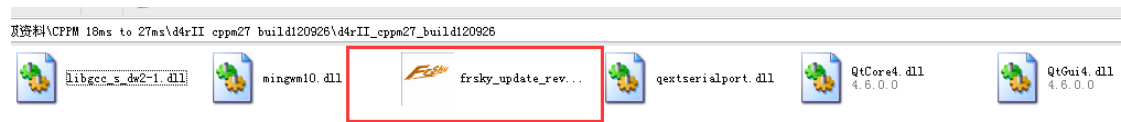

Step 5:

Connector battery to receiver

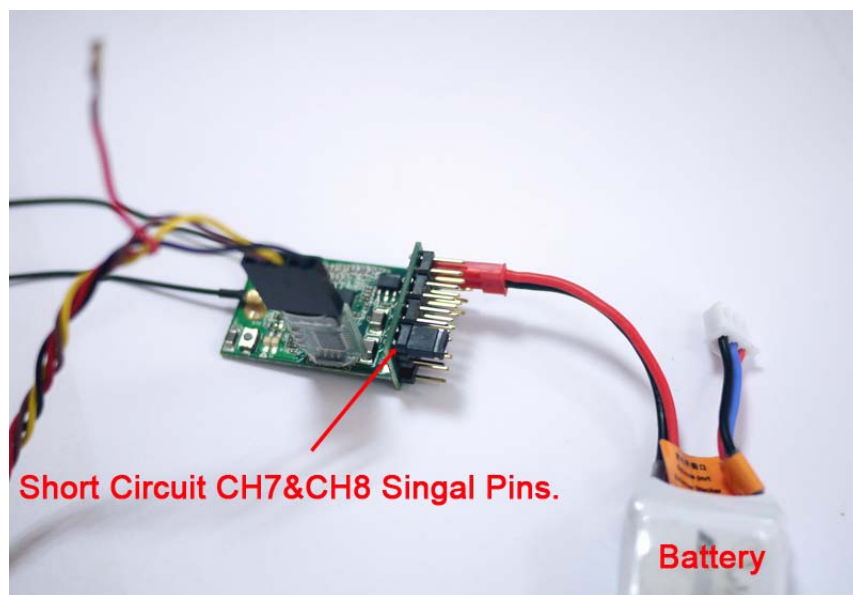

Step 6:

After getting the UID number, click the Download button to start the firmware upgrade.

Step 7:

Exit the process by clicking the END button after finish. Unplug the jumper from the receiver.

If fail in getting COM port number or UID number, please re-connect battery, FrSky serial/USB cable and re-start from the beginning.