


## Template for ProgressiveRC Charger Interface Panel

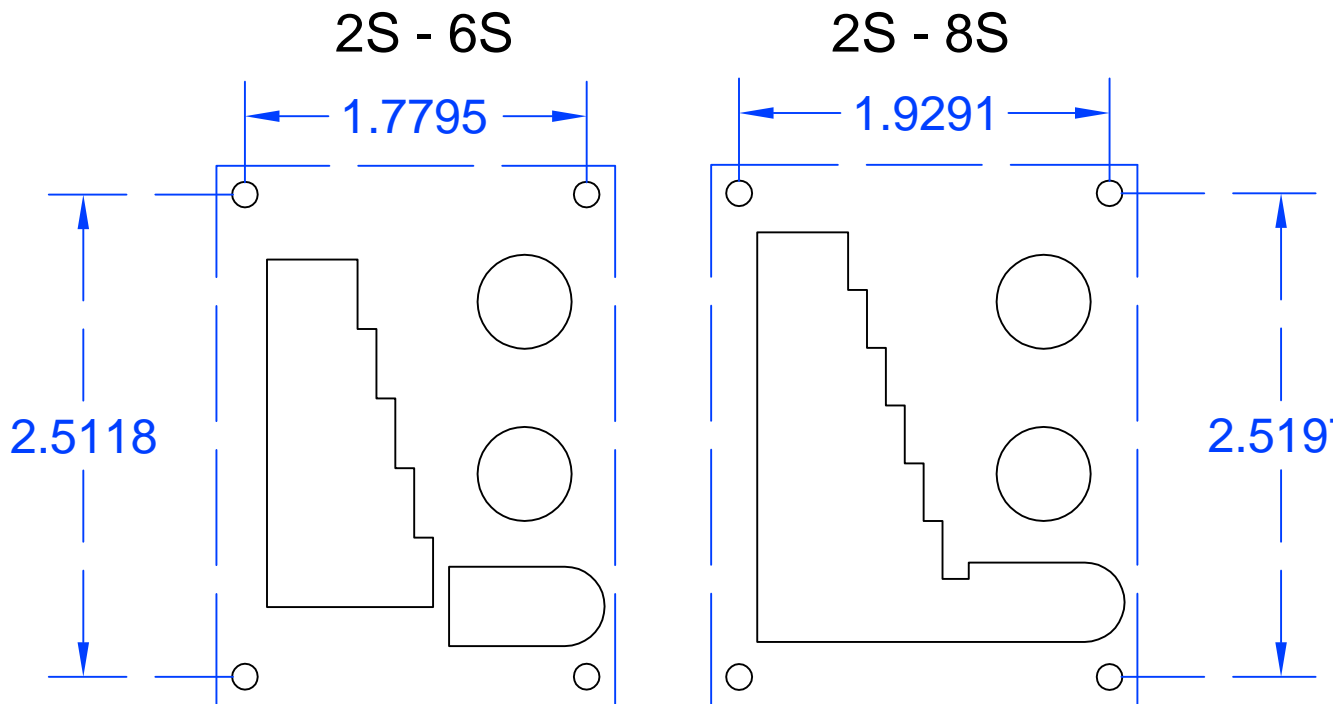

If printing this template, print at actual size, and do not allow re-scaling.

Installation Notes: Remove and do not use upper plastic spacer on banana plug binding posts. Use only the lower plastic spacer above the circuit board